


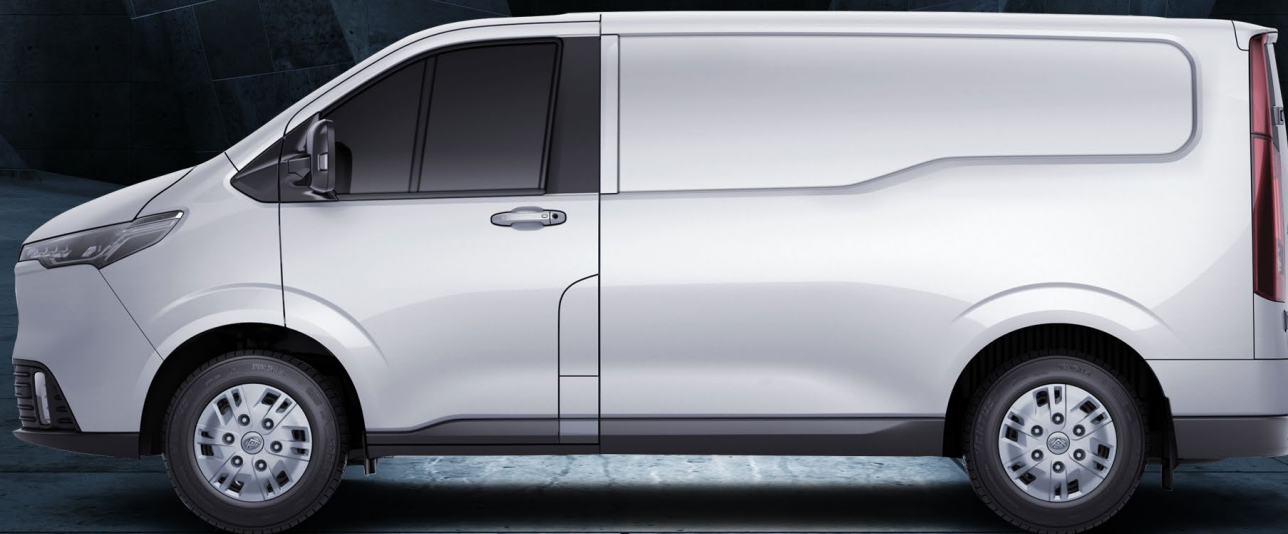

**DELIVER 7**



Specification of DELIVER 7 MAY 2024

# MAXUS DELIVER 7





Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
------------------	-----------------------------	-----------------------------

Engine & Transmission		
Engine	SAIC π D20	
Type	Four-cylinder 16-valve, double EGR, dual-axis balancing system, dual independent cooling cycle, variable displacement oil pump, variable eddy current ratio SAIC π diesel engine	
Capacity (ml)	1996	
Cylinders/Volves	4/16	
Max Power (kW /rpm)	110/3500	
MaxTorque (Nm /rpm)	375/1500~2400	
Fuel System	DIESEL	
Euro Emission Status	EURO VI E	
Fuel Tank Capacity (Litres)	80	
Fuel Efficiency(WLTP Combined)	7.9	8
WLTP CO2 g/km	205.4	208
Stop & Start System	YES	
Gearbox	MANUAL	
Number Of Gears	6	

\*Cargo  
 \*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.  
 Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Dimensions &amp; Capacities</b>		
Number Of Seats	3	3
Overall Length (mm)	5372	5372
Overall Width Without Mirrors (mm)	2030	2030
Overall Height (mm)	1999	2420
Wheel Base (mm)	3357	3357
Cargo Volume (m <sup>3</sup> )*	7.2	9.2
Loadspace Length (mm)	2913	2913
Loadspace Width (mm)	1800	1800
Loadspace Height (mm)	1428	1428
Max Loadspace Width Between Wheel Arches (mm)	1390	1390
Slide Door Width (mm)	990	990
Slide Door Height (mm)	1300	1300
Min Ground Clearance (mm)	146	167

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
------------------	-----------------------------	-----------------------------

Weights & Payload		
GVW(kg)	3500	3500
CVW(kg)	2280	2280
Payload: GVW-CVW(kg)	1220	1220
Max Axle Lead: Front/Rear(kg)	1830/2050	1830/2050
GTM (kg)	5200	5200
Towing Capacity (Braked/Unbraked) (kg)	2000/750	2000/750

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Power &amp; Driving</b>		
Driving Wheel	FWD	FWD
Max Speed (km/h)	160	160
Acceleration 0-100km/h (sec)	21.7	21.7
Min Turning Diameter (m)	13.4	13.4
Approach Angle/Departure Angle (CVW) (°)		
Approach Angle/Departure Angle (GVW) (°)		
Maximum Climbing Capacity (%)	25%	25%
Tyre	215/65R16C	215/75R16C
Brakes Front/Rear	Front/Rear Disc Brake	

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Exterior</b>		
Solid Paint (White)	S	S
Metallic Paint (Blue, Brown, Silver,Black)	O	O
LED Headlight + LED Rear Taillight	S	S
Automatic Headlight	S	S
Front & Rear Fog Lights	S	S
Steel Wheels 6.5 x 16	S	S
Heated Exterior Mirrors	S	S
Heated Windshield	S	S
Roof Rack Mounting Points	S	S
Integrated Rear Step	S	S
Rear Trailer Tow Interface	S	S
Rear Trailer Tow Interface With Controller*	S	S

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Interior &amp; Comfort</b>		
Electric Power Steering	S	S
Man-made-leather Multifunctional Steering Wheel	S	S
Manually Driver Seat with Single Armrest (Height-Adjustable, Sliding, Reclining, Adjustable Lumbar support, Cushion-adjustable)	S	S
Dual Passenger Seat	S	S
Heated Driver Seat & Heated Dual Passenger Seat	S	S
Anti-glare Interior Mirror	S	S
Column-mounted Shifter(Only Up & Down)	S	S
Drive&Passenger Side Power Windows (One Touch Up & Down)	S	S
Automatic Windshield Wiper	S	S

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Interior &amp; Comfort</b>		
Manual Front Air Conditioning	S	S
Automatic Front Air Conditioning	S	S
4.2' LCD Instrument	S	S
12.3" Touch Screen With Mp5 & Bluetooth & Carplay & Android Auto	S	S
USB Input	S	S
Type C Input	S	S
4 Speakers	S	S
DAB	S	S
2 Smart Keys + Keyless Start	S	S

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Cargo Area</b>		
Steel Cargo Floor	S	S
Full Steel Bulkhead	S	S
Steel Bulkhead With Observation Window	O	O
Single Sliding Door	S	S
Dual Sliding Door	—	—
Electric Side Step (Only kerbside)	S	S
LED Cargo Lights	S	S
Rear Wing Doors with 90°/180° Opening	S	S

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.  
Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Safety &amp; Security</b>		
Tyre Pressure Monitoring System	S	S
6 Airbags (Front,Side,Curtain) For Driver & Front Passengers	S	S
ECall	S	S
Safety Belt Reminder	S	S
Front Radar	S	S
Rear Radar	S	S
Reversing Camera	S	S
360° Camera	S	S
Central Lock	S	S
With DPF One Key Regeneration	S	S

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.



Basic Parameters	L2H1 Single Sliding Door	L2H2 Single Sliding Door
<b>Driver Assistance</b>		
ESP+EBA+HHC	S	S
Electronic Parking Brake	S	S
Cruise Control	S	S
Automatic Emergency Braking System	S	S
FCW (Front Collision Warning System)	S	S
Rear Cross Traffic Alert	S	S
Lane Departure Warning & Lane Keeping Assist System	S	S
Emergency Lane Keeping Assist System	S	S
Blind Spot Detection & Door-Open Warning System	S	S
Lane Change Assist	S	S
Speed Limit Information	S	S
Driver Monitor System	S	S
Adjustable Overspeed Warning	S	S

\*Cargo

\*\*You need to buy and install connecting cables through after-sales to make the interface & controller work.

Also available in dual sliding doors.